
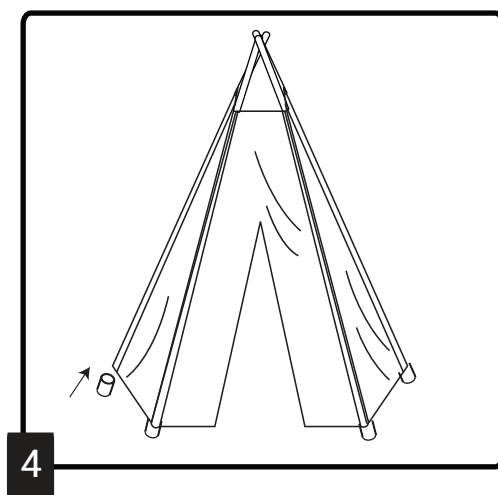
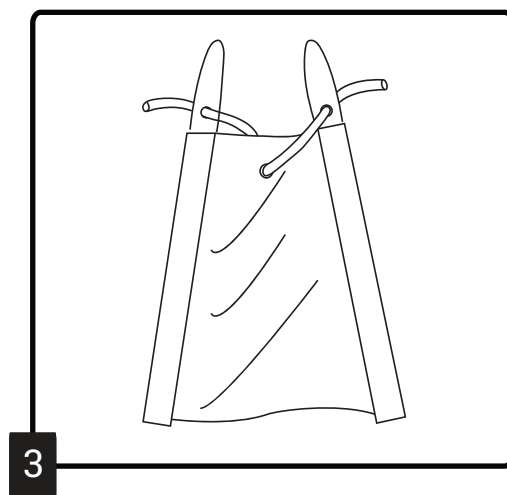
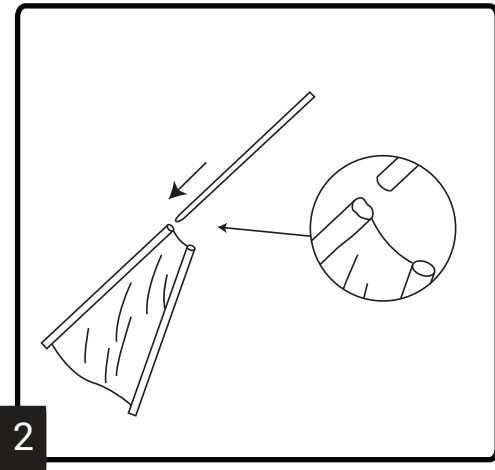
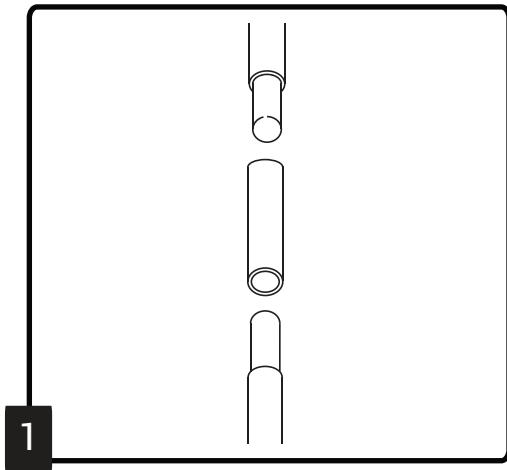


KINDERTIPI

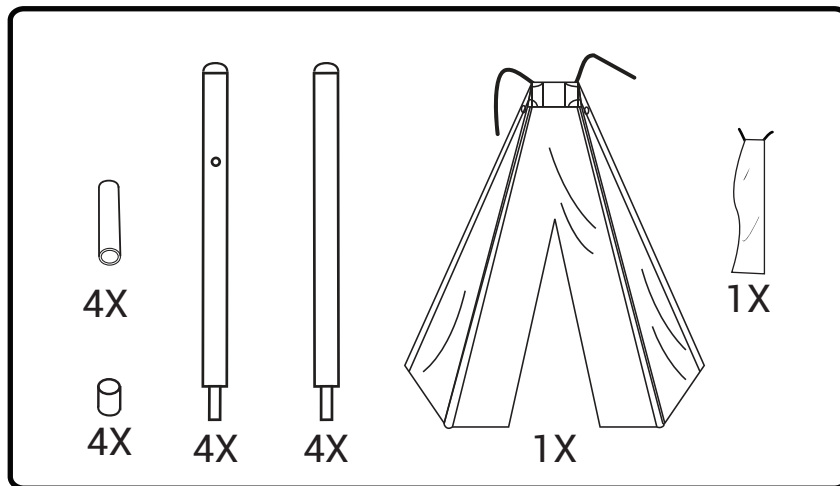

Let op met jonge kinderen, bevat kleine onderdelen.
Be careful with young children, contains small parts.
Seien Sie vorsichtig mit kleinen Kindern i.v.m. Kleinigkeiten

SAFETY WARNINGS – PLEASE READ CAREFULLY

- Use tent on level ground, clear of all stones or sharp objects
- Tent is designed for general child play ONLY
- Tent is not waterproof and is NOT intended for camping outdoors
- If interior frame or poles becomes bent or broken, discontinue use and discard immediately
- Never let children use the tent without adult supervision.
- Always keep the play tent away from open flames.

